

MANUAL – INSTALLATION

In-Wall Diffuser

DF1W-RF Series

v100 – Issue Date: 04/13/15


© 2015 Price Industries Limited. All rights reserved.

PRICE[®]

IN-WALL DIFFUSER

INSTALLATION INSTRUCTIONS

DF1W-RF ▼

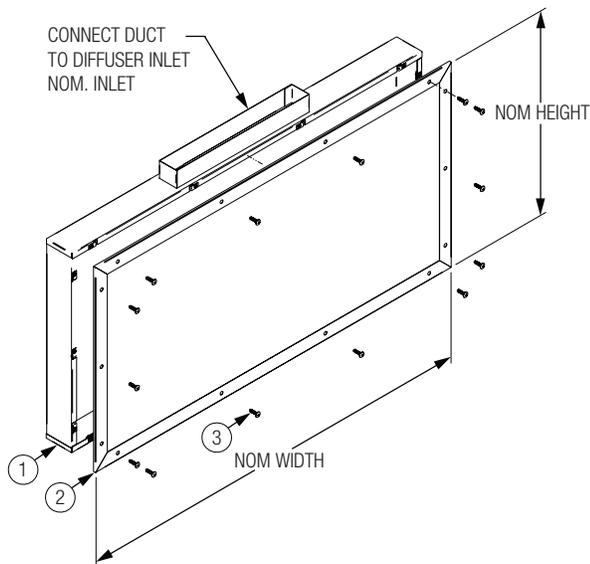

READ INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION

1. Make sure plenum (Item 1) is protruding a 1/4" from the face of the studs to allow drywall to butt up against plenum for better air seal for the diffuser (Figure 1).
2. Measure from the floor to the bottom of the plenum for desired height of diffuser face, e.g. If a height of 12" is required add 3/8" to this to mount the plenum box at the appropriate height. (Figure 2) total measured height would be 12 3/8" to the bottom of the plenum. Fasten plenum box with screws (supplied by others)
3. Insert the diffuser face into the plenum, use the Price supplied screws to mount the diffuser face to the plenum. (Figure 3)
4. **NOTE:** On units that have the secondary baffle see Figure 4 for baffle direction.

Item #	Description
1	Plenum x 1
2	Face x 1
3	Screws

NOTE: Standard screws issued with DF1W Displacement unit are 1 1/2" 1/4-20 stainless steel screw. These will work with up to 3/4" thick drywall. If drywall is thicker than 3/4" a different length screw must be requested at time of ordering.

FIGURE 1 ▼

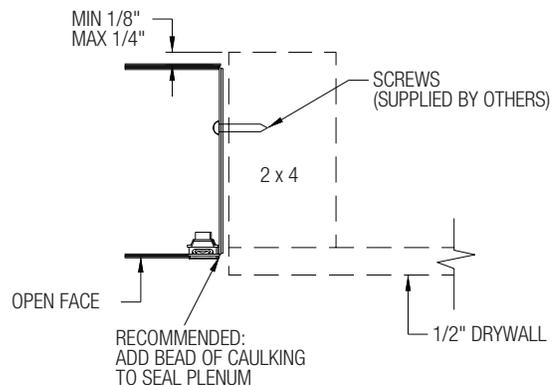


FIGURE 2 ▼

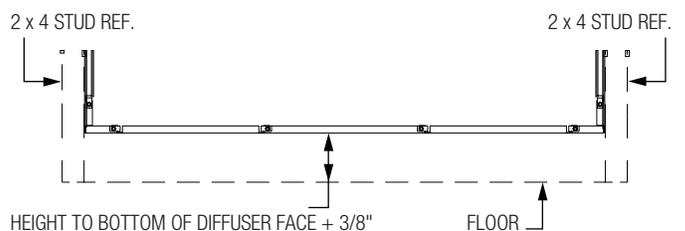


FIGURE 3 ▼


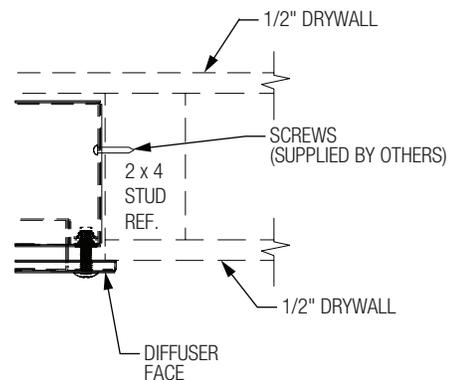


FIGURE 4 ▼

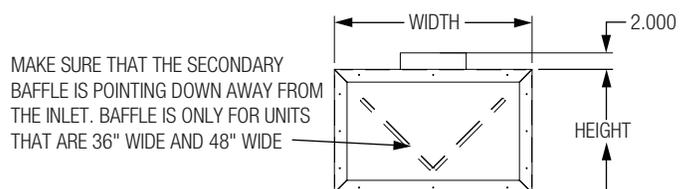

This document contains the most current product information as of this printing.
For the most up-to-date product information, please go to priceindustries.com.

© 2015 Price Industries Limited. All rights reserved.

price®